

INTERFACE CONVERTOR INSTRUCTION MANUAL

CENTRONICS LINE BOOSTER

The seventeen most important lines pins no. 1 to 17 are amplified by bus buffers and pin no. 18 to 25 is ground lines. Therefore use a model for your in-house long distance date RS-232 interface in your PC & printer equipment.

ELECTRONIC SPECIFICATIONS:

Power adaptor input : AC 120V 60HZ (OR 230V 60HZ/50HZ)
output: DC +9V 200mA.

Line Supports Pins: 2-6, 8, 20 pin 1,7 is wired directly
form the male connector to the female.

INTERFACE: CENTRONIC Parallel interface

INDICATORS: Red LED indicator indicate power on condition

SIZE: 75 mm(L)* 43 mm(W)* 20 mm(H) weight: 260g

■ NON-POWER Series without power adaptor.

