



POTENTIOMETER INSTALLATION

Below installation method is available.

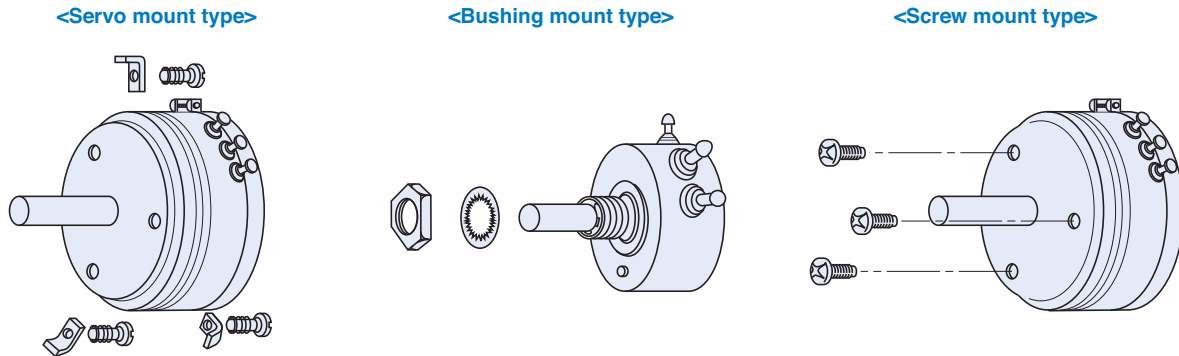

External dimensions for servo mount ratchet

(Unit: mm)

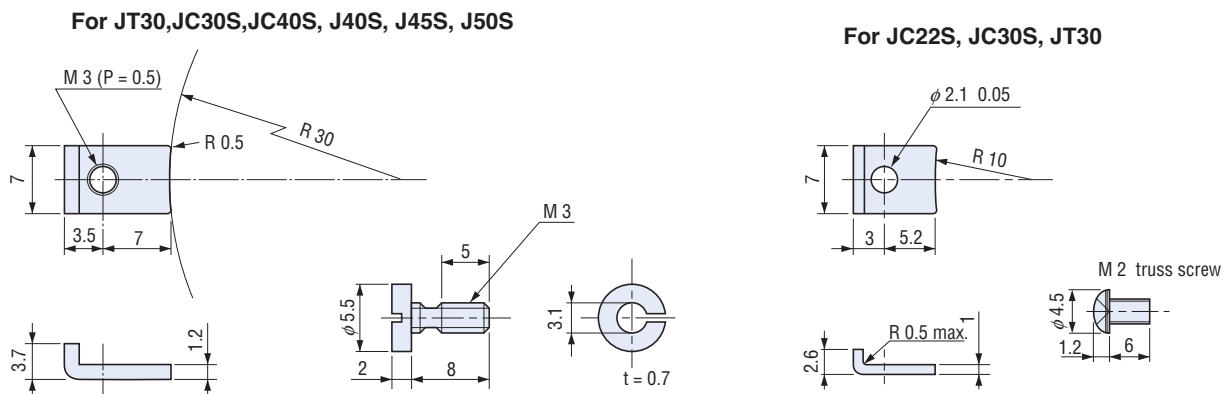

The ratchet for servo mounting can be provided upon request.

LIST OF INSTALLATION

Installation	Series name	J series	JC series	JP-30	JT series	MC series
Servo mount type		●	●		●	
Bushing mount type				●		●
Screw mount type		●	●		●	