





B 7

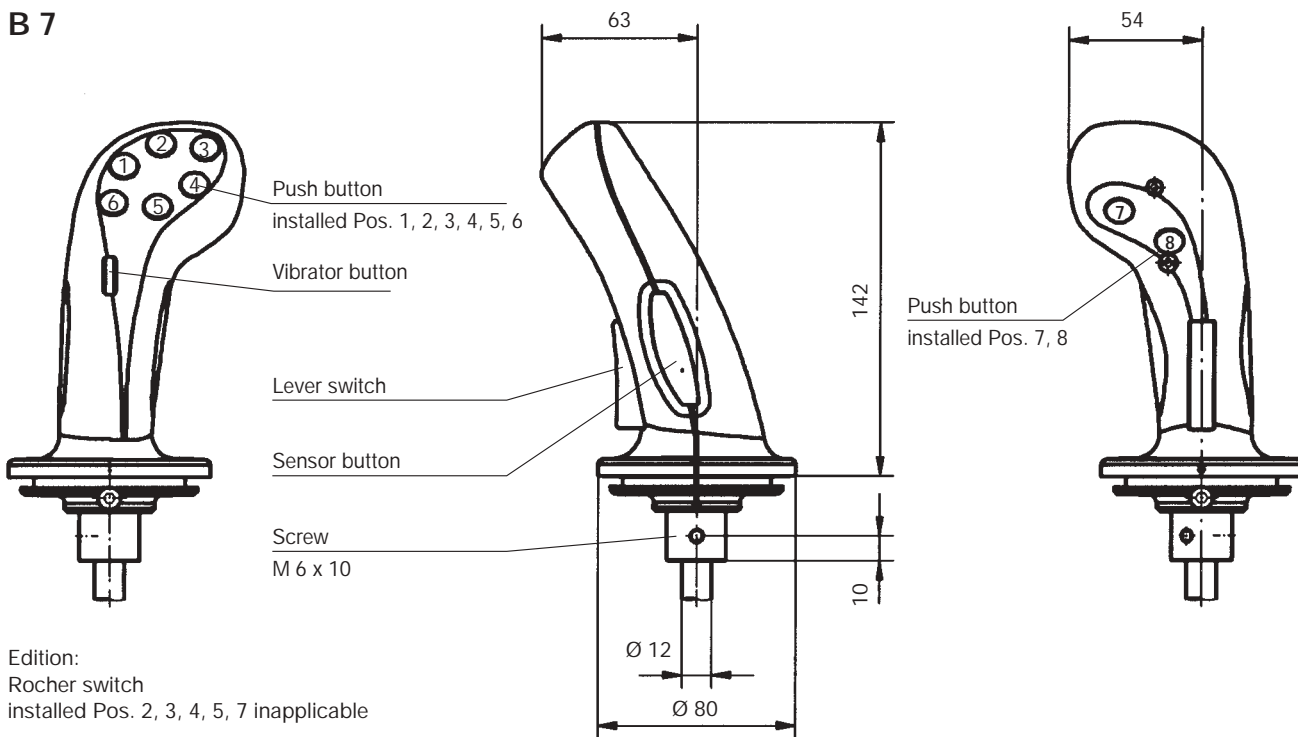

Edition:
Rocher switch
installed Pos. 2, 3, 4, 5, 7 inapplicable

B 8

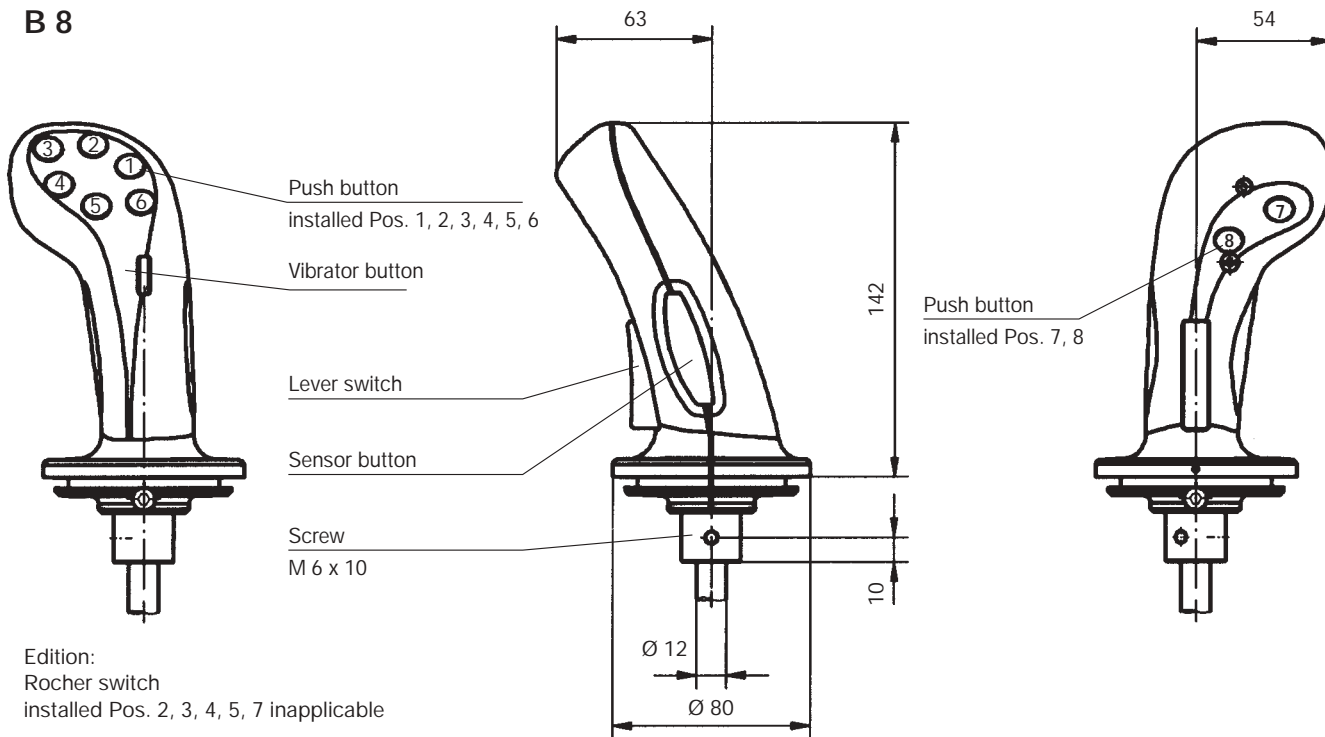

Edition:
Rocher switch
installed Pos. 2, 3, 4, 5, 7 inapplicable

Example for type-sign

B 7 D K V SE - X

Palm grip
Push button
Lever switch



Special please to describe
Sensor button
Vibrator button