

MODEL DB10-26B

● Digital-Readout ● RoHS Compliant

Dial ▶ Digital




Model DB10-26B
(3 digits indication)




Model DB100-26B
(4 digits indication)

Standard Dimensions

Model DB10-26B · DB100-26B

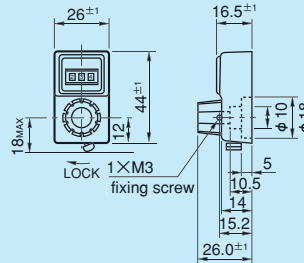



Panel Arrangements

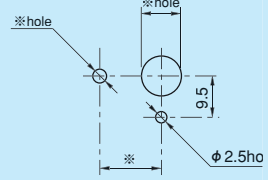

Note: 1. The diameter of ※hole is depending on the diameter of potentiometer to be mounted.
2. Fixing nut, washer and hexagonal wrench are attached.

Model DB10-26BA · DB100-26BA (with an anti-rotation pin on the rear side of the case)

Model DB10-26BD (with an anti-rotation pin on the rear side of the case and without a flexible coupling)

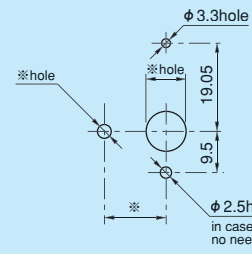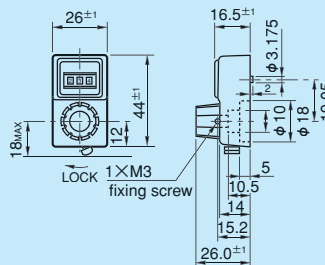

Note: The diameter of ※hole is depending on the diameter of potentiometer to be mounted.

General Specifications


Model No	Number of Turns-Counting	Max. Indication	Matching Shaft Dia. (mm)		Combinable Helicalohm Pot. (Matching shaft length of 25mm)	Standard Color of Case	Flexible coupling	Lock Device	Operating Temperature Range	Mass (Approx. g)
			Standard	Special						
DB10-26B	10	999	6	3, 3.175 4, 6.35	20HP 46HD 22HPM 20HHP 22HHPM 25HP	Ivory	Yes	Yes	-30°C ~ +85°C	60
DB10-26BA	10	999								
DB10-26BD	10	999								
DB100-26B	100	9999								

Note: DB10-26BD version does not attach mounting adaptor and nut, because such mounting hardware does not need when mounting this dial and the potentiometer.

Special Specifications Available

- Special colors on housing and spin plate on the top of the knob (Black, etc.)
- Special graduation such as with a decimal point, comma, etc.

Construction of DB Dials and How to mount DB Dials.

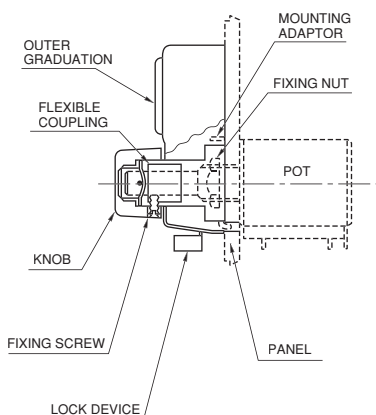

The mounting adaptor as well as specially shaped nut only for use with Model DB series Dials and Helicalohm pot. are fixed on the panel according to the illustration given the left.

The shaft of the Helicalohm pot. is turned anticlockwise to its limit and is put into the mounting hole of the dial which is already set at "000". At the same time, 3 projections of the mounting adaptor are inserted in 3 receiving holes prepared on the base plate of the dial and then all parts should be pressed on the panel firmly to eliminate any space. The shaft of the potentiometer is fixed by the hexagonal nut positioned in the knob of the dial by screwing it with an attached hexagonal wrench. With this, the mounting is completed.

CAUTION: When rotating DB dial with a flexible coupling mounted with multi-turn potentiometer with over 0.2N·m, the flexible coupling may be damaged or broken. So, please take care of this point during its operation.