

Multi-axis controller V 5 Spare parts

4/120 2002



The spindle block Pos. 1, 3 incorporates an internal gearing, control-handle with knob solid, bellow, ring nut and prepared for mounting the master switch.

The master switch Pos. 30-36 incorporates a cam shaft, cam disks and contacts complet mounted together.

By all spare part orders it is nessesary to inform us about the Work-No. (7 characters) on the switch gear.

Spindle block with schematic representation of the master controller installation and deflection directions. Version shown for left hand side installation (right-hand side installation is mirror image).



Deflection directions designated to DIN 15025

Pos.	V 51 V 5		Drawing No.	Туре	Weight gramm	Price EURC
1	1 1			V 51	400	
2	<u>,</u>					
3	3 ← → 4			V 5	500	
4	2 2					
5	2					
9	Gate open-shaped (for open shifting)		KBKL		50	
10	Gate cross-shaped (prohibits diagonal shifting)		KBKK	Р	50	
11	Gate special-shaped (for e. H-gate)		KBKL	Р	50	
12	Spring return in 0-position (2 fixing, 2 spring) (for each direction)		TOTAL III	Z	25	
13	Friction brake (for each direction)		KMI/11	R	30	
20	Control-handle with knob solid with joint		KHE/43		50	
21	Control-handle with latch for mechanical zero interlock with joint		KHE/34	М	50	
22	Control-handle with dead man's button (mechanical parts) with joint		KHE/45	T	50	
23	Control-handle with signal button (mechanical parts) with joint		KHE/46	H	50	
24	Control-handle with push button (mechanical parts) with joint		KHE/65	D	60	
25	Control-handle with flat push button (mechanical parts) with joint		KHE/276	DV	60	
26	Control-handle with palm grip B 5 with joint		KBAD/254	B 5	40	
27	Control-handle with palm grip B 5 with push button top (mechanical parts) with joints		KBAD/311	B 5T	60	
28	Control-handle long or short 140, 100 mm					
29	More knobs, grips and T-grips with and without signal devices look catalog 1/228					
30	Master switch switching sequence 3-0-3 No. of contacts	1	KHE/92	1	150	
31		2		2	160	
32	Direction 1-2 and 3-4 each master switch (only together deliver)	3		3	170	
33	Switching program according contact-arrangement MS look catalog 5/001	4		4	180	
34	or to your contact-arrangement	5		5	190	
35		6		6	200	
36	Switching sequence 4-0-4					
41	Prepared for mounting potentiometer shaft 6 mm adjusting angle 2 x 150°		KHE/185	(P)		
42	Prepared for mounting potentiometer e.t.c. adjusting angle variable			(P)		
43	More potentiometer e.t.c. look catalog 1/240					
80	Bellows		KMD 20			
81	Ring nut (for mounting the bellow)		KMS 3			
82	Gasket (for spindle block Pos. 1, 3)		KMD 25			
83	Gasket cap (for push button Pos. 24)					
84	Knob solid (for Pos. 20)		KBAD 66			
85	Knob-type with shaft activities (for Pos. 21-25, 1 Pos. only)					
86	Joint bracket (for Pos. 20-27)		KHE/142			
87	Notching (1 notching lever with roll, 1 notching spring, 1 notching disk)					
88	Cam disk without contact-arrangement		KBUC 47			
89	Cam disk with contact-arrangement		KBUC 47			
90	Microswitch (166) 2 A 250 V AC 15 with roll-lever and insulating disk (for Pos. 30-35)					
91	Microswitch (166) 2 A 250 V AC 15 with fixings and contact striker (for Pos. 22, 23, 24, 27)	KEN/05			