



Surface Mounted Box


1

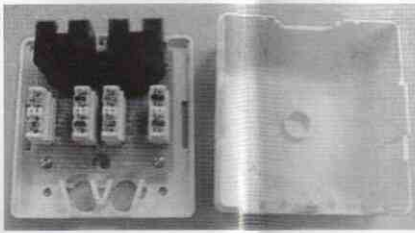

Unshielded

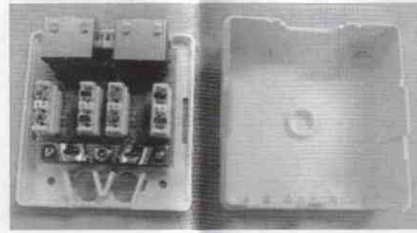


Half shielded

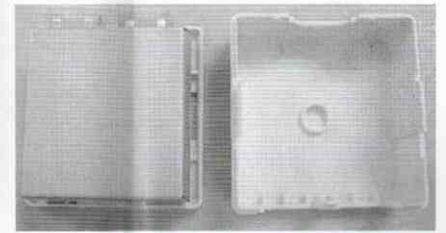

Full shielded


2

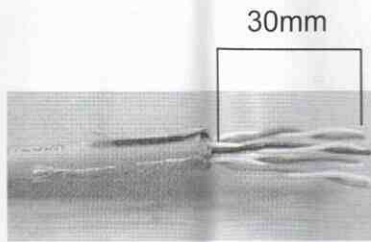

30mm

Strip approximately 30mm of the cable jacket, and separate the wires into 4 pairs.

3

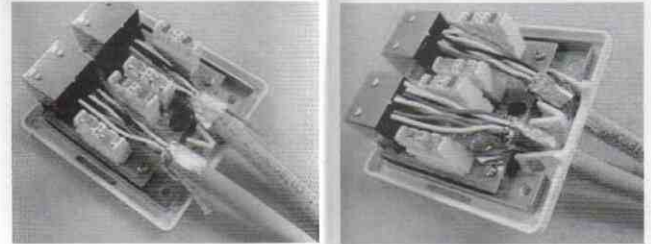

JE342 series provides two entrances for cables, please pre-insert the cables before installation.

4

T568A


- Pin 1 White/Green
- Pin 2 Green
- Pin 3 White/Orange
- Pin 4 Blue
- Pin 5 White/Blue
- Pin 6 Orange
- Pin 7 White/Brown
- Pin 8 Brown

T568B

- Pin 1 White/orange
- Pin 2 Orange
- Pin 3 White/Green
- Pin 4 Blue
- Pin 5 White/Blue
- Pin 6 Green
- Pin 7 White/Brown
- Pin 8 Brown


Complete wiring instruction for T568A & T568B.

5

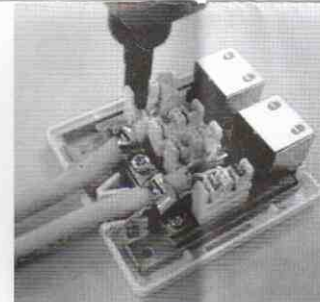


Follow the wiring instruction and IDC color-coding to punch the wires by 110 or KRONE punching tool.

6

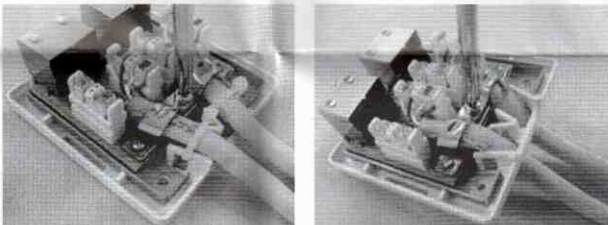

Fasten the cable holder and make sure the foil or braid shield makes contact with the cable holder.

7

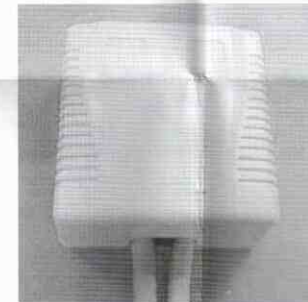

Place the upper cover to complete the installation.