


German Flush Mounted Plate


307 series

1

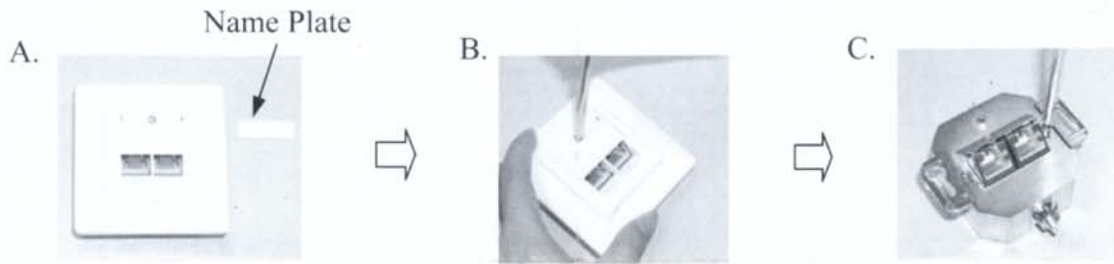


Load down the name plate and tapping screws step by step.

2

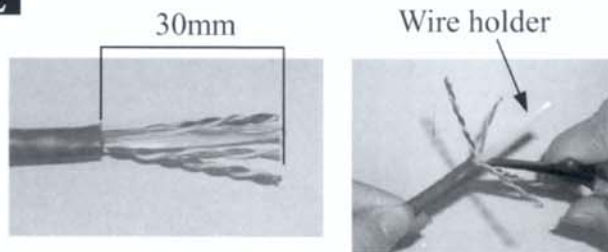


Strip approximately 30mm of the cable jacket, separate to 4 pair each and use the cutter to cut the wire holder.

3

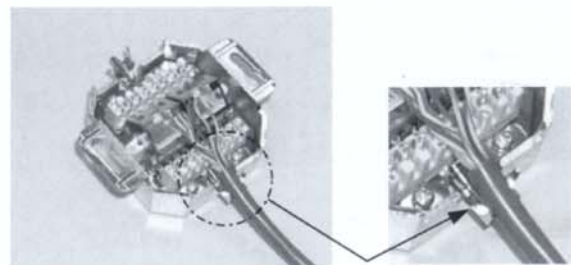

Insert the cable jacket directly into the "Cable Clamp".

4

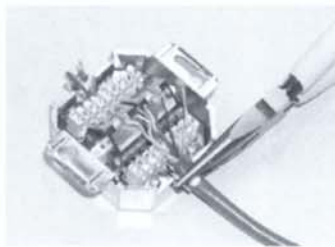

Using the "Plier" bending to hold tightly.

5

T568A		T568B	
Pin 5	White/Blue	Pin 5	White/Blue
Pin 4	Blue	Pin 4	Blue
Pin 1	White/Green	Pin 1	White/Orange
Pin 2	Green	Pin 2	Orange
Pin 3	White/Orange	Pin 3	White/Green
Pin 6	Orange	Pin 6	Green
Pin 7	White/Brown	Pin 7	White/Brown
Pin 8	Brown	Pin 8	Brown


Follow the KRONE IDC color code to position T568A or T568B wiring.

6



Use the KRONE impact tool to crimp and connect the wires.

7

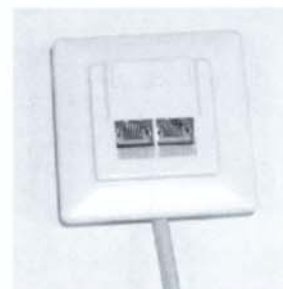

Place the upper cover, screws, name plate, then complete the installation.