


Keystone Jack Installing Instructi

1

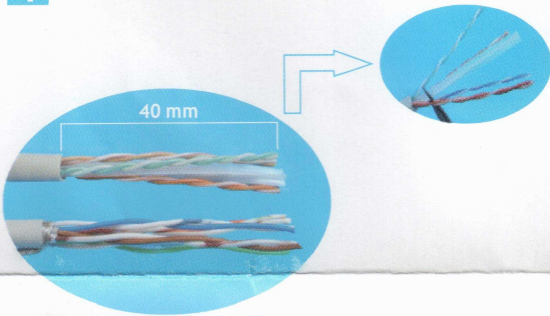

Strip approximately 40mm of the cable jacket, and cut off the plastic cross.

2

Punchdown Sequences

T568A


- Pin 5 White/Blue
- Pin 4 Blue
- Pin 1 White/Green
- Pin 2 Green
- Pin 3 White/Orange
- Pin 6 Orange
- Pin 7 White/Brown
- Pin 8 Brown

T568B

- Pin 5 White/Blue
- Pin 4 Blue
- Pin 1 White/Orange
- Pin 2 Orange
- Pin 3 White/Green
- Pin 6 Green
- Pin 7 White/Brown
- Pin 8 Brown


Unshielded Type

3

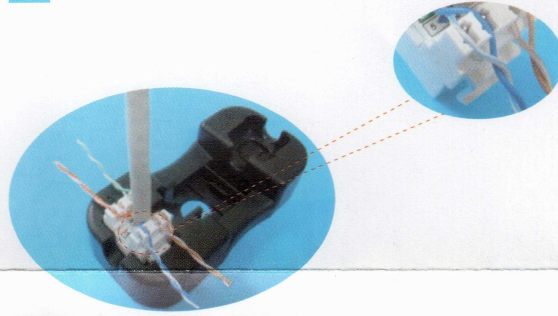


Follow the wiring sticker to place the wires into IDC slot. Keep the pairs twisted as possible as you can.

4

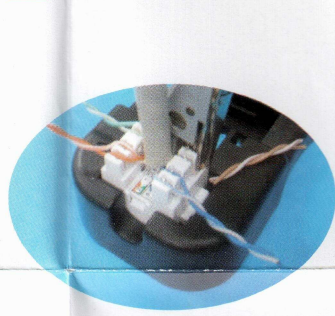

Punch the wires with 110 or Krone impact tool and cut off the surplus wires.


5

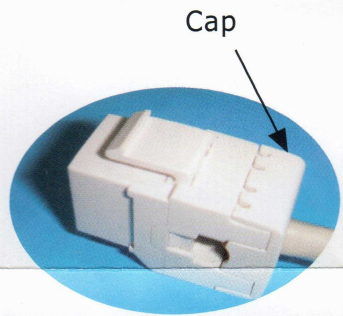

Snap in the IDC cap to fix the wires, and finish the installation.


Shielded Type

3

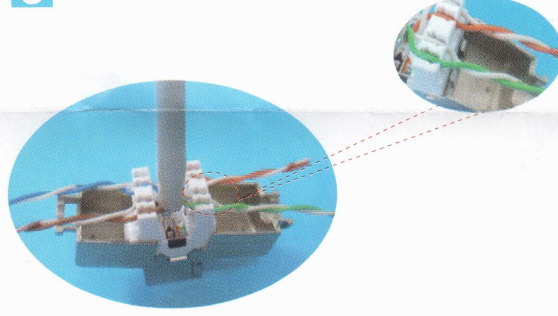


Follow the wiring sticker to place the wires into IDC slot. Keep the pairs twisted as possible as you can.

4

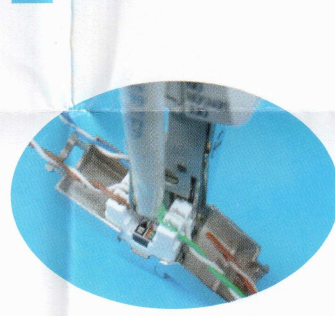

Punch the wires with 110 or Krone impact tool and cut off the surplus wires.

5

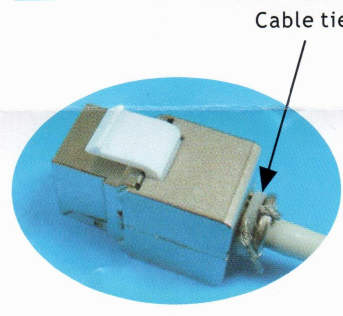

Tie up the cable by cable tie, and finish the installation.