

MAXIM

MAX4121 Evaluation Kit

General Description

The MAX4121 evaluation kit (EV kit) is an assembled and tested board for evaluating the MAX4111 and MAX4121 crosspoint building blocks. Microstrip construction techniques are used to preserve signal integrity. The two-layer board is made from 0.062" FR4 epoxy.

Ordering Information

PART	TEMP. RANGE	BOARD TYPE
MAX4121EVKIT-SO	+25°C	Surface Mount

Note: To evaluate the MAX4111 crosspoint, order a sample of the MAX4111CSA.

Component List

DESIGNATION	QTY	DESCRIPTION
C1, C2	2	10 μ F capacitors
C3, C5	2	1000pF capacitors
C4, C6	2	0.1 μ F capacitors
J8, J9	2	SMA connectors
R1, R2	2	51 Ω , 5% 1206 resistors
R3	1	5.1k Ω , 5% 1206 resistor
R4, R5	2	100 Ω , 5% resistors
SW1	1	4-pin, 2-circuit dip switch
U1	1	MAX4121CSA
J10	1	Scope-probe jack Specialty Connectors 33JR135-1

Quick Start

The MAX4121 EV kit is fully assembled and tested. Follow these steps to verify board operation. **Do not turn on the power supply until all connections are completed.**

- 1) Connect a ± 5 V split supply to the board. $V_{CC} = +5$ V, GND = common, $V_{EE} = -5$ V.
- 2) Hook up input sources to the SMA input connectors. Use a 50 Ω source impedance; input levels must be within ± 2.5 V of GND.
- 3) Select channels with the A0 switch and observe outputs at the OUT connector. Refer to Table 1.
- 4) Turn on the power supply and verify the output signal on the oscilloscope. The board should not draw more than 10mA from each supply.
- 5) Accurate gain-flatness measurement:
 - a) Apply a signal to an input.
 - b) Take the measurement with high-frequency FET probes at the pins of the IC, not at the connectors.

Evaluating the MAX4111

To evaluate the MAX4111, remove the MAX4121 and install a MAX4111 at U1. Put the A0 switch in the "0" position and then turn on the power. Connect the input source to IN0 (IN1 is not used). The EN switch enables and disables the output. Refer to Table 2.

Table 1. MAX4121 Switch Functions

A0	EN	OUT
0 (ON)	0 (ON)	High impedance
1 (OFF)	0 (ON)	High impedance
0 (ON)	1 (OFF)	IN0
1 (OFF)	1 (OFF)	IN1

Table 2. MAX4111 Switch Functions

A0	EN	OUT
0 (ON)	0 (ON)	High impedance
0 (ON)	1 (OFF)	IN0
1 (OFF)	0 (ON)	Undefined; do not use
1 (OFF)	1 (OFF)	Undefined; do not use

Evaluates: MAX4111/MAX4121

MAX4121 Evaluation Kit

Evaluates: MAX4111/MAX4121

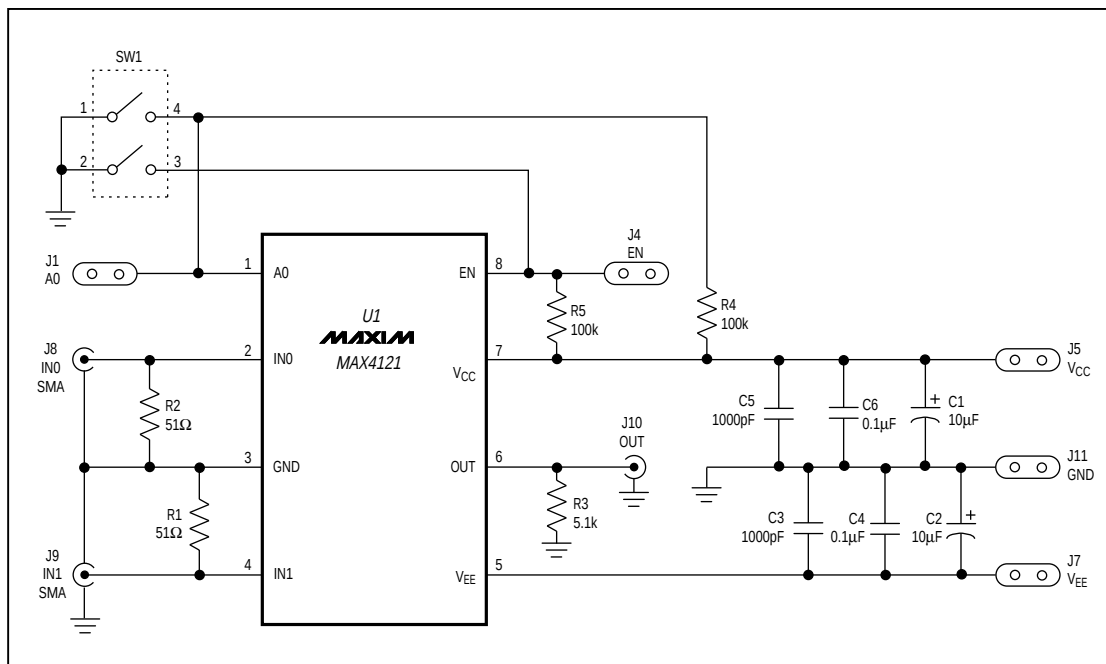


Figure 1. MAX4121 EV Kit Schematic Diagram

Evaluates: MAX_{4111}/MAX_{4121}



MAX4121 Evaluation Kit

1994 EVALUATION KIT DATA BOOK FAXBACK OFFER



Accelerate your time to market with Maxim's evaluation kits (EV kits) that simplify design-in and prototyping. For your convenience, the *1994 Evaluation Kit Data Book* includes EV kit manuals and corresponding data sheets covering 95 products in one easy-to-use book. To receive your free data book, simply FAX this response card to your nearest Maxim office, or call toll-free 1-800-998-8800 (in the US only) for prompt fulfillment. We look forward to serving you.

FAX NUMBERS:

US (408) 737-7194

Italy (02) 99041981

Japan (03) 3232-6149

UK (01734) 305577

France (1) 30 64 73 48

Taiwan (2) 555 6348

Germany (Maxim GmbH) (089) 8544239

My application is: _ _ _ _ _

My end product is: _ _ _ _ _

Name _____ Title _____

Company _____

Address _____

City _____ State _____ Zip _____ Phone# _____

MAX4121 EV DS REV 0

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

4 _____ **Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 (408) 737-7600**

© 1995 Maxim Integrated Products

Printed USA

MAXIM is a registered trademark of Maxim Integrated Products.