

MAXIM

MAX464/MAX466 Evaluation Kit

Evaluates: MAX464/MAX466


General Description

The MAX464/MAX466 evaluation kit (EV kit) simplifies the evaluation of the MAX464 and MAX466 quad buffered video switches. Both ICs combine high-accuracy amplifiers with high-performance video switches. Amplifier gains are set to 1V/V for the MAX464 and 2V/V for the MAX466. Fast switching times, low differential phase/gain errors, and 75Ω output drivers make the MAX464 and MAX466 ideal for all video applications.

Component List

DESIGNATION	QTY	DESCRIPTION
U1	1	Maxim MAX466CWI
C1, C2, C3	3	0.33μF ceramic capacitors
R1-R12	12	75Ω, 5% resistors
R13-R16	4	10kΩ, 5% resistors
SW1	1	4-position DIP switch
IN0A-IN3A, IN0B-IN3B, OUT0-OUT3	12	BNC jacks
None	1	MAX464/MAX466 PC board
None	1	MAX463-MAX470 data sheet

EV Kit

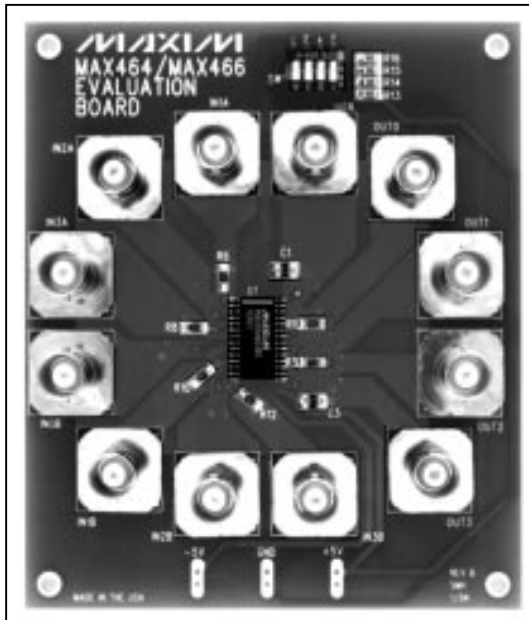

Features

- ♦ 100MHz Unity-Gain Bandwidth
- ♦ 75Ω Output Impedance
- ♦ 300V/μs Slew Rate (MAX466)
- ♦ 20ns Channel Switching Time
- ♦ Logic Disable Mode:
 - High-Z Outputs
 - Reduced Power Consumption

Ordering Information

PART	TEMP. RANGE	BOARD TYPE
MAX466EVKIT-SO	0°C to +70°C	Surface Mount

Quick Start

The MAX464/MAX466 EV kit is fully assembled and tested. Follow the steps below to verify board operation. **Do not turn on the power supply until all connections are completed.**

- 1) The circuit requires supply voltages of ±5V. Connect ±5V supplies to the corresponding pads marked +5V and -5V. Connect power-supply ground to the pad marked GND.
- 2) Apply a signal of ±1.25V maximum to the BNC jack input marked IN0A.
- 3) Connect the output marked OUT0A to an oscilloscope through a terminated 75Ω cable.
- 4) On DIP switch SW1, set LE, $\overline{\text{EN}}$, A0, and $\overline{\text{CS}}$ to the on position (logic 0).
- 5) Turn on the power supply and verify the output signal on the oscilloscope.
- 6) Refer to the *Amplifier and Channel Selection* section for additional modes of operation.

MAXIM

Maxim Integrated Products 1

Call toll free 1-800-998-8800 for free samples or literature.

MAX464/MAX466 Evaluation Kit

Detailed Description

The MAX464/MAX466 operate on $\pm 5V$, allowing input and output signals levels of $\pm 2.5V$. BNC jacks are provided for all input and output signals. Channel selection is controlled by a single TTL-compatible input pin, A0.

The MAX464 is configured for unity gain. The MAX466 is configured for a gain of 2V/V, making it ideal for driving back-terminated coaxial cable. The standard EV kit comes with the MAX466 installed. To evaluate a MAX464, contact Maxim's Sample Department to order a MAX464CWI sample. To modify the board for the MAX464, simply replace the MAX466 with the MAX464. No other changes are necessary.

Amplifier and Channel Selection

A 4-position DIP switch provides easy control of the MAX464/MAX466 logic inputs. The A0, $\overline{CS}$, $\overline{EN}$, and LE control lines have 10k Ω pull-up resistors to +5V. The DIP switch is oriented so that switch on = logic 0 and switch off = logic 1. Tables 1a and 1b are the truth tables for the control inputs. Refer to the *Digital Interface* section of the MAX463-MAX470 data sheet for further details.

Table 1a. Amplifier and Channel Selection with Switch LE = HIGH (Switch = OFF)

$\overline{CS}$	$\overline{EN}$	A0	FUNCTION
0	0	0	Enables amplifier outputs; selects channel A
0	0	1	Enables amplifier outputs; selects channel B
0	1	X	Disables amplifiers; outputs high-Z
1	X	X	Latches all input registers; changes nothing

Driving Coaxial Cable

High-speed performance, excellent output current capability, and an internally fixed gain of 2V/V make the MAX466 ideal for driving 50 Ω or 75 Ω back-terminated coaxial cables. The EV kit is configured with 75 Ω terminating resistors on all inputs, and 75 Ω back-terminating resistors on all outputs for 75 Ω coaxial cable matching. Using the MAX466 results in an overall gain of one at the terminated cable's output. With the MAX464 installed, the overall gain is reduced to one-half the input signal when driving a terminated cable.

Layout Considerations

The MAX464/MAX466 EV kit layout is optimized for high-speed signals. All signal traces are kept the same length and as short as possible to maintain phase relationship and minimize inductance. Separate AC grounds surround each signal trace, to reduce crosstalk. Normally, latch enable (LE) is hard-wired to either V+ or ground near the device to prevent crosstalk to IN0A. Capacitor C1 is included on the EV board to shield IN0A from the logic input traces, which are located near IN0A. For further layout recommendations, see the *Power-Supply Bypassing and Board Layout* section of the MAX463-MAX470 data sheet.

Table 1b. Amplifier and Channel Selection with Switch LE = LOW (Switch = ON)

$\overline{CS}$	$\overline{EN}$	A0	FUNCTION
0	0	0	Enables amplifier outputs; selects channel A
0	0	1	Enables amplifier outputs; selects channel B
0	1	0	Disables amplifiers; outputs high-Z; A0 register = channel A
0	1	1	Disables amplifiers; outputs high-Z; A0 register = channel B
1	0	X	Enables amplifier outputs; latches A0 register; programs outputs to channel A or B according to the setting of A0 at $\overline{CS}$'s last edge.
1	1	X	Disables amplifiers; outputs high-Z

MAX464/MAX466 Evaluation Kit

Evaluates: MAX464/MAX466

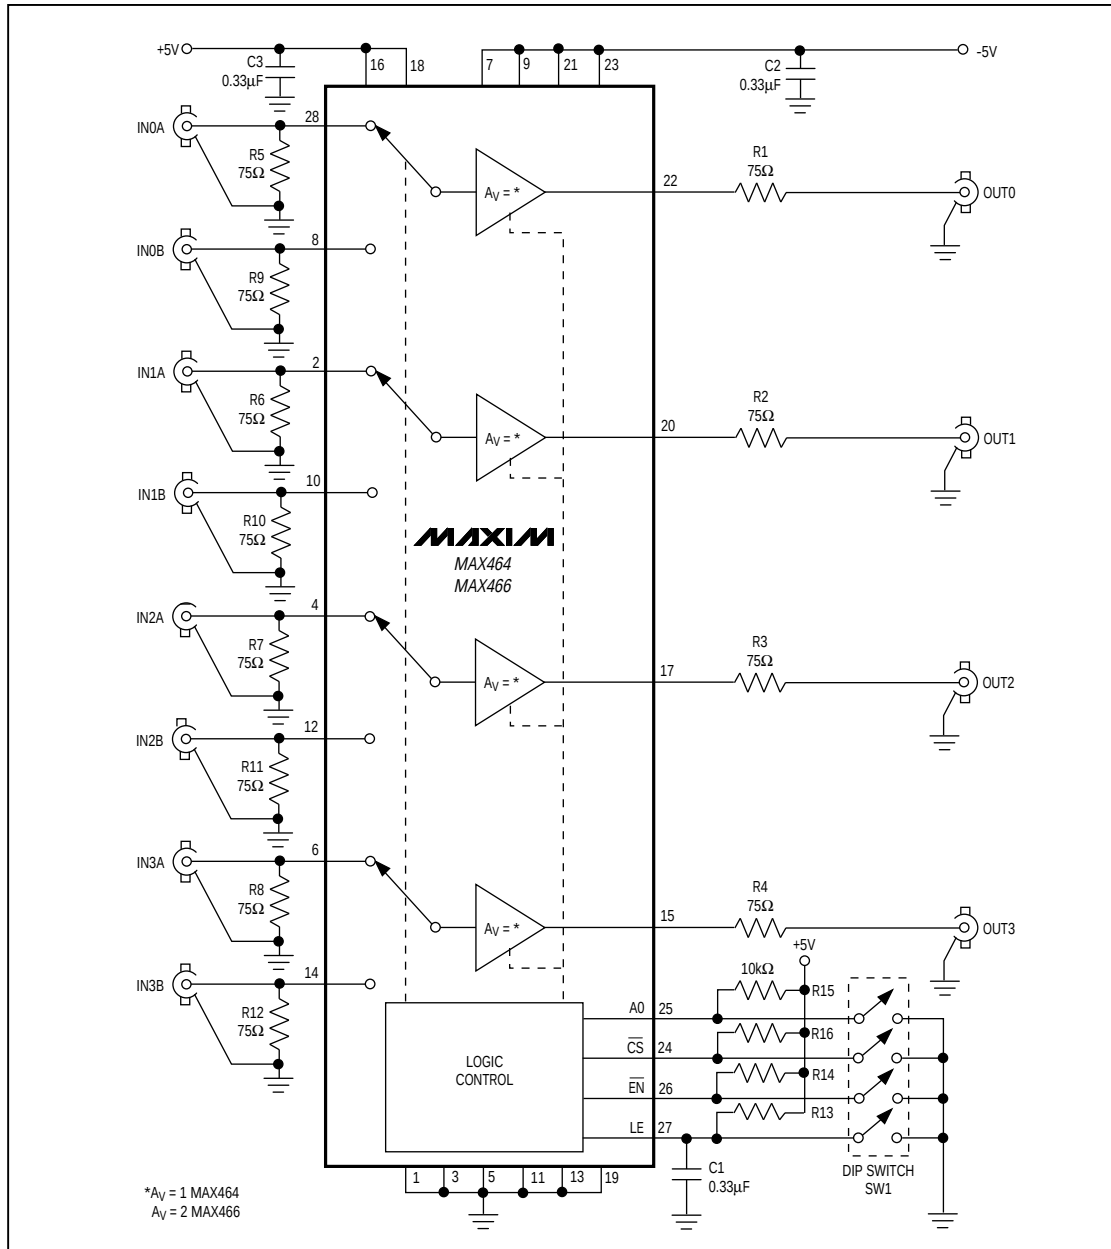


Figure 1. MAX464/MAX466 EV Kit Schematic

MAX464/MAX466 Evaluation Kit

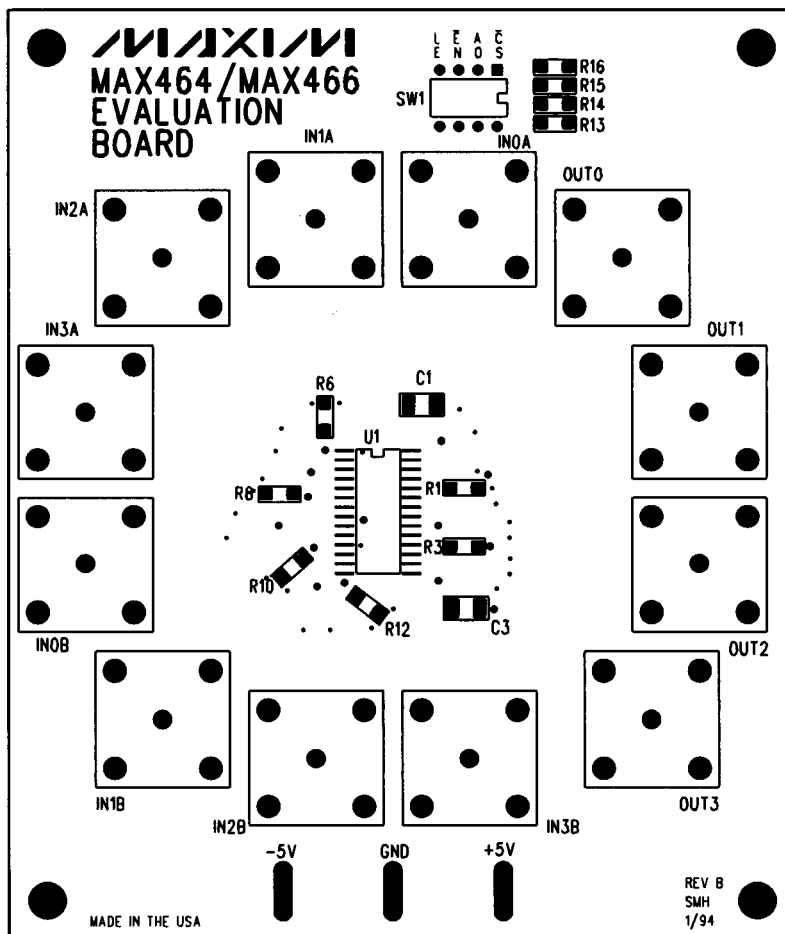


Figure 2. MAX464/MAX466 EV Kit Component Placement Guide—Component Side

MAX464/MAX466 Evaluation Kit

Evaluates: MAX464/MAX466

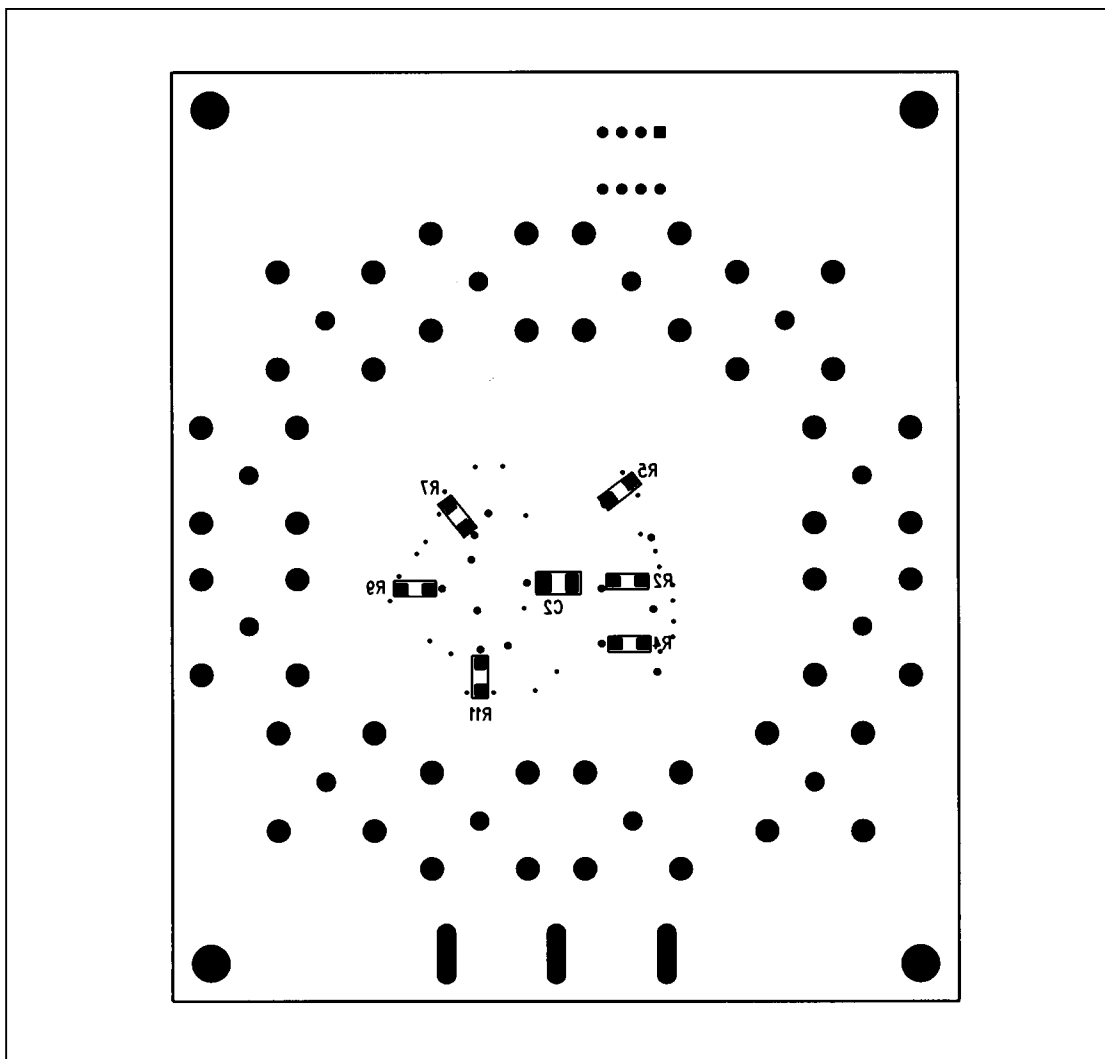


Figure 3. MAX464/MAX466 EV Kit Component Placement Guide—Solder Side

MAX464/MAX466 Evaluation Kit

Evaluates: MAX464/MAX466

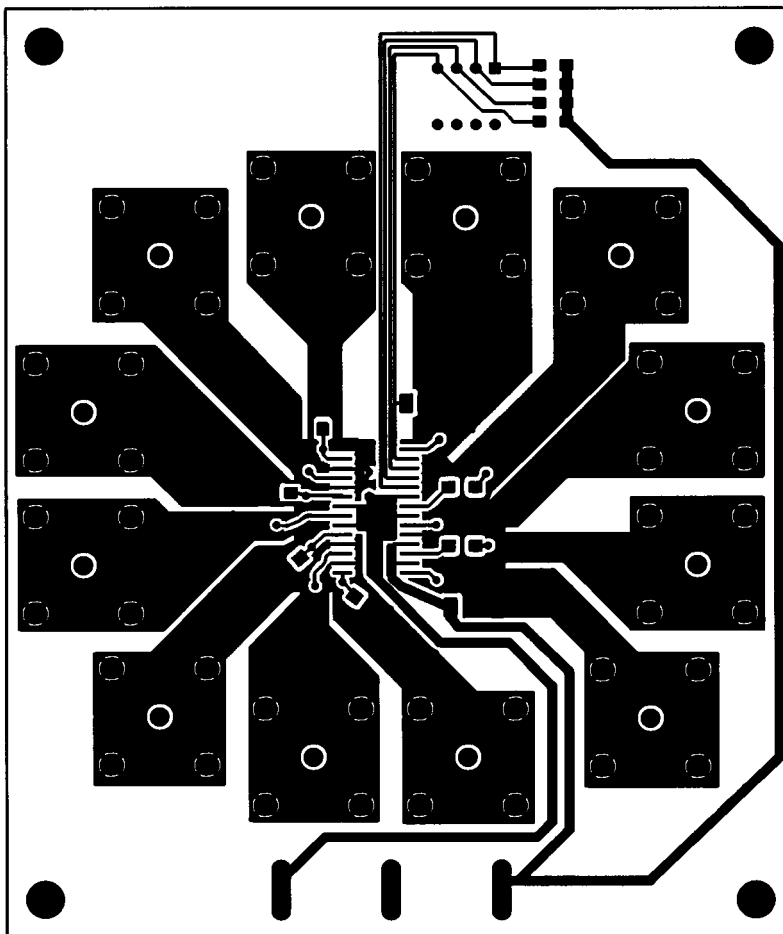


Figure 4. MAX464/MAX466 EV Kit PC Board Layout—Component Side

MAX464/MAX466 Evaluation Kit

Evaluates: MAX464/MAX466

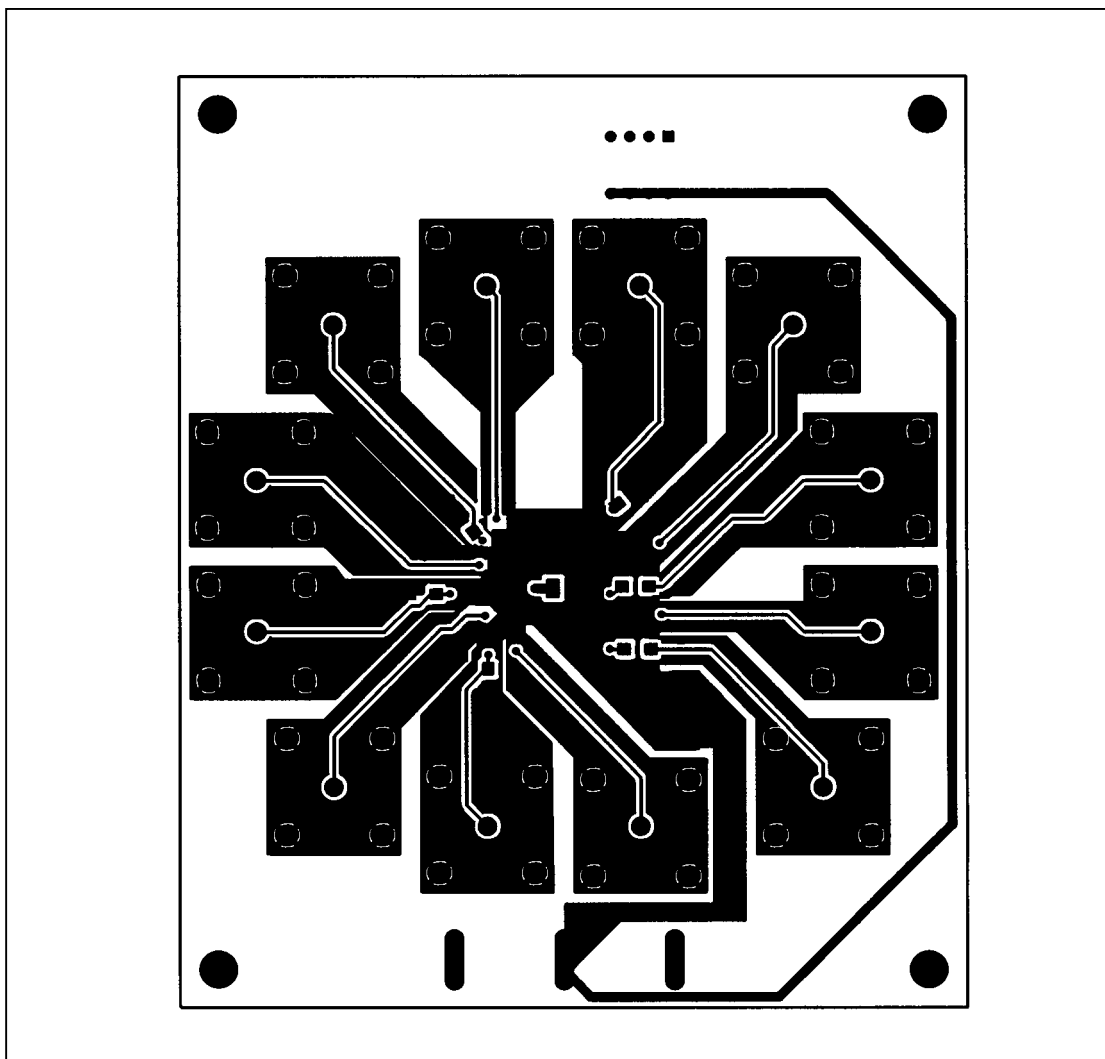


Figure 5. MAX464/MAX466 EV Kit PC Board Layout—Solder Side

Evaluates: MAX464/MAX466

MAXIM

**1994
EVALUATION KIT
DATA BOOK**

Features:

- Product Data Sheets
- Evaluation Kit Manuals
- Prior Literature Request Cards

Other Data Books Available from Maxim:

- *Linear Power Amplifiers Data Book*
- *CMOS Digital Systems Manual (MSP400) CD-ROM Computer Circuit Information*
- *CMOS Digital Systems Manual (MSP400) CD-ROM Computer Circuit Information*
- *CMOS Low-Power Design Data Book, Vol. I*
- *CMOS Low-Power Design Data Book, Vol. II*
- *CMOS Applications & Projects Highlights Book*
- *CMOS Applications & Projects Highlights Book*

Call toll free 1-800-698-0800 for free samples or literature.

Accelerate your time to market with Maxim's evaluation kits (EV kits) that simplify design-in and prototyping. For your convenience, the *1994 Evaluation Kit Data Book* includes EV kit manuals and corresponding data sheets covering 95 products in one easy-to-use book. To receive your free data book, simply FAX this response card to your nearest Maxim office, or call toll-free 1-800-998-8800 (in the US only) for prompt fulfillment. We look forward to serving you.

US (408) 737-7194

Italy (02) 99041981

Japan (03) 3232-6149

UK (0734) 84 38 63

France (1) 30 64 73 48

Taiwan (35) 777659

Germany (Maxim GmbH) (089) 8544239

My application is: _____

My end product is: _____

Name	Title
------	-------

Company	Revenue	Profit	Assets	Liabilities	Equity
Company A	100	20	120	80	40
Company B	150	30	180	120	60
Company C	200	40	240	160	80
Company D	250	50	300	200	100
Company E	300	60	360	240	120
Company F	350	70	420	280	140
Company G	400	80	480	320	160
Company H	450	90	540	360	180
Company I	500	100	600	400	200
Company J	550	110	660	440	220
Company K	600	120	720	480	240
Company L	650	130	780	520	260
Company M	700	140	840	560	280
Company N	750	150	900	600	300
Company O	800	160	960	640	320
Company P	850	170	1020	680	340
Company Q	900	180	1080	720	360
Company R	950	190	1140	760	380
Company S	1000	200	1200	800	400

Address _____

City	State	Zip	Phone#
------	-------	-----	--------

MAX464/MAX466 EV DS REV 1

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

8 **Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 (408) 737-7600**

© 1994 Maxim Integrated Products

Printed USA

MAXIM is a registered trademark of Maxim Integrated Products.